


# B30 | Operating Manual

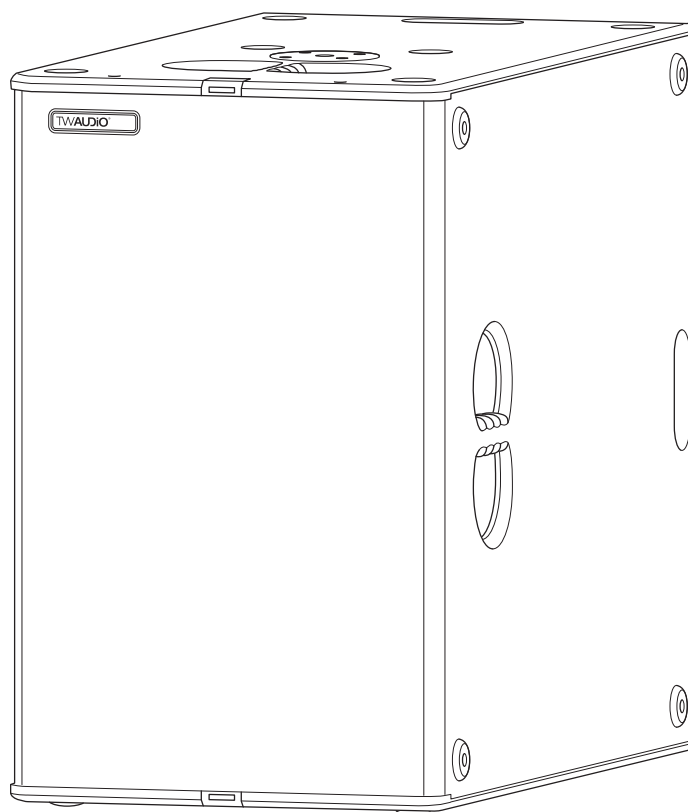

## Introduction

Thank you for choosing a high quality product "MADE IN GERMANY" from TW AUDiO.

The hybrid construction of our B30 with 2 x 15" speakers combines the advantages of bass reflex and horn systems – high efficiency, great range and a deep low frequency limit.

The connection to the acoustic field happens over the entire front area thus reducing air friction and flow losses to a minimum. The result is efficient energy transfer with simultaneous controlled impulse reproduction and excellent dynamics. And at almost 40 kg [88,18 lbs] the B30 is a lightweight.

The relation of its size, weight and output turns this TW AUDiO classic into something special.

If you lend your product to another party, inform that party of the safety-related operating procedures and hand over this operating manual. If you therefore require additional copies of this operating manual, they can be obtained free of charge from TW AUDiO or downloaded from: [www.twaudio.de](http://www.twaudio.de)

### Instructions in the operating manual

Strictly adhere to the instructions contained in this operating manual that are marked as follows:



This symbol in combination with the signal word "Warning" identifies a potentially hazardous situation. Failure to comply with this safety instruction can lead to serious injury or even death.



This symbol in combination with the signal word "Warning" identifies a potentially hazardous situation for persons with a pacemaker. Failure to comply with this safety instruction can lead to serious injury or even death.



This symbol in combination with the signal word "Caution" identifies a potentially hazardous situation. Failure to comply with this safety instruction can lead to light or moderate injury.



This symbol in combination with the signal word "Note" identifies a potentially hazardous situation. Failure to comply with this safety instruction can lead to product damage.



This symbol in combination with the signal word "Tip" identifies additional information or notes that will simplify working with TW AUDiO products on the basis of practical experience.

## Notes on the products

### Read manual before use!

Before setting up the device, read the operating manual carefully and keep this document in a safe place together with the B30 loudspeaker.

## General information

Operating manual: OM-B30  
Version 1.1 en, 09/2016  
© by TW AUDiO 2016; all rights reserved.

All information contained in this operating manual was correct to the best of our knowledge at the time of printing.

Quality warranties or assurance of suitability for a certain type of use based on the technical specifications, dimensions and weights are not granted by TW AUDiO.

TW AUDiO also shall not assume liability for any secondary damage (property damage and/or personal injury) nor for the failure to comply with this operating manual.

TW AUDiO reserves the right to make changes that take into account the latest engineering advancements.

TW AUDiO is pleased to receive suggestions for improvement and recommendations on this operating manual. Please send us any feedback you may have to the following e-mail address.

[info@twaudio.de](mailto:info@twaudio.de)

TW AUDiO GmbH  
Osterholzallee 140-2  
71636 Ludwigsburg, Germany

Telephone: +49 (0) 71 41 - 48 89 89 0  
Telefax: +49 (0) 71 41 - 48 89 89 99

Content

**Safety | Intended use ..... 1**

**Overview ..... 3**

    Components ..... 3

**Technical data ..... 4**

    Data sheet ..... 4

    Wiring diagram ..... 4

**Setting up the loudspeaker ..... 5**

    Setup ..... 5

    Connecting cables ..... 5

    Operation ..... 6

**Transport and storage ..... 7**

**CE Conformity Declaration ..... 8**

**Disposal ..... 9**

## 1. Safety | Intended use

Please adhere to the following safety instructions to avoid risks when operating the loudspeakers.

The B30 loudspeaker was developed for professional use in sound systems. The loudspeaker may only be used by trained and qualified personnel.

Note the operating modes described in this operating manual.  
Other uses are not permissible.

TW AUDiO GmbH shall not be held liable for any damage that ensues from unintended use.



Loudspeakers generate an electromagnetic field. Persons with pacemakers are not permitted to remain in the immediate vicinity of loudspeakers as the electromagnetic fields can cause pacemakers to malfunction.



When working with heavy loads over 20 kg [44,09 lbs], use suitable aids (dollies, hoisting slings, etc.). Multiple people may be required depending on the situation.

Ensure that the units are in a stable position and are firmly attached. A falling loudspeaker can result in serious personal injury and property damage.

When using and assembling TW AUDiO loudspeakers, only use materials specified by TW AUDiO. These tasks must be performed by qualified personnel. Adhere to the applicable safety regulations.



When using the loudspeakers, ensure that they are not exposed to the following ambient conditions:

- Direct sunlight
- Moisture
- Jolting
- Dust



Keep away from the immediate vicinity of loudspeakers that are operated at high sound pressure levels. These loudspeaker systems are capable of endangering your health. Sound levels beginning as low as approx. 90 dB SPL can lead to long-term hearing impairment.



Avoid:

- Feedback
- Distorted signals (clipping)
- Peaks that result when devices are switched on or hot plugged and unplugged.

These signals can lead to loudspeaker overload..



Ensure that the loudspeaker is not exposed to permanent thermal overloads. This may cause a fire and result in serious personal injury and property damage.

Note that TW AUDiO does not provide a warranty for damage that can be attributed to this type of overload and therefore cannot be held liable for any secondary damage.



A permanent, magnetic field is present in the immediate vicinity of loudspeakers. Ensure that objects which react sensitively to magnetic fields are not located in the immediate vicinity of the loudspeaker. In particular, this applies to magnetic data carriers, EC cards and CRT displays. A distance of approx. one meter is sufficient to avoid damage.



Check loudspeakers and accessory parts regularly for visible wear. This is essential to ensure fault-free operation on a permanent basis. Replace worn parts promptly. Spare parts can be obtained from TW AUDiO.

## 2. Overview

### 2.1 Components

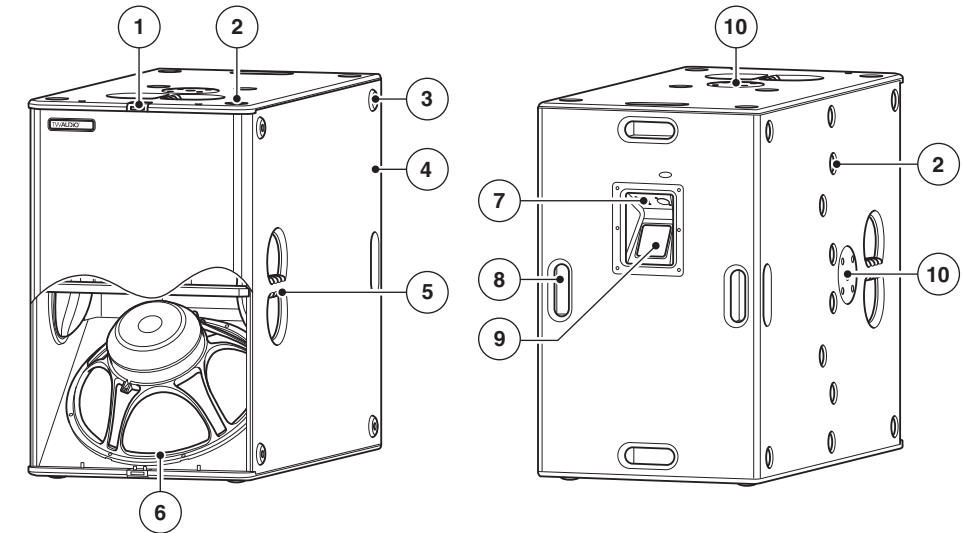


Figure 2.1 - Overview

1. Dolly latch base to attach the TW AUDIO B30 front dolly
2. Milling for rubberfeet for safely stacking loudspeakers
3. Rubber feet (8 pieces)
4. 15 mm multiplex housing – Warnex texture paint surface finish
5. Ergonomic carrying handle (top and bottom, left and right)
6. 15" cone drivers
7. Standard connection panel
8. Carrying handle (rear, top and bottom, left and right)
9. Type label
10. Cabinet flange M20 for attaching a distance rod

3. Technical data

3.1 Data sheet

Components	2x 15" LF
Frequency response	35 – 200Hz
Power handling, program/ peak	2000/4000 W
Impedance	8 Ω
Max. SPL/1 m	133 dB
Dimensions (h x w x d)	706 x 446 x 800 mm [27,80 x 17,56 x 31,50 in]
Weight	38.7 kg [85,3 lbs]
Finish	Warnex texture paint

3.2 Wiring diagram

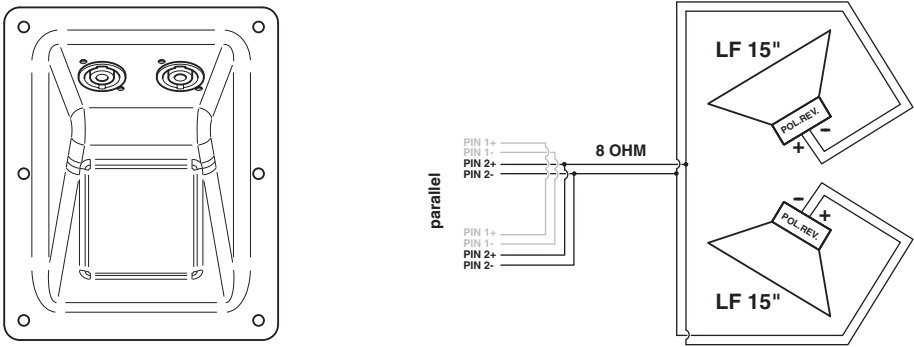


Figure 3.2 - Wiring diagram



## 4. Setting up the loudspeaker

### 4.1 Setup

The B30 loudspeaker is designed for standing, vertical and horizontal operation.



Ensure that the loudspeakers are securely attached to prevent personal injury and property damage. Secure stacked loudspeakers properly so that they can be tipped by 10° in any direction without toppling.



TW AUDiO recommends using only the accessories specified by TW AUDiO to install and secure the loudspeakers.

### 4.2 Connecting cables

To create a cable connection with an amplifier rack from TW AUDiO, proceed as follows.

The correct presets need to be selected for the cable connections.



Ensure that the cable cross section is sufficiently large (at least 1.5 mm<sup>2</sup>) to avoid power losses. TW AUDiO recommends using the loudspeaker cables available from TW AUDiO.

When connecting the cables to the loudspeaker, ensure that the polarity (+/-) and pin assignment (1/2) are correct. Incorrect connection results in a significant change in the loudspeaker sound characteristics and may damage the compression driver.

The pin connections of the B30 loudspeaker can be found in section 3.2 “Wiring diagram” on page 4.

The two connection sockets on the back of the B30 can be used to link multiple loudspeakers on a single amplifier. Note that parallel connection reduces the total impedance ( $\Omega$ ) seen by the amplifier.

The total impedance of loudspeakers connected in parallel must not drop below the minimum operating impedance of the amplifier.



In Cardio Setup mode, the sound radiated toward the rear is reduced. Ensure that you have selected the correct preset for this setup. Incorrect connection results in a significant change in the loudspeaker sound characteristics and may cause damage.

## 4.3 Operation

TW AUDiO recommends operating the B30 loudspeaker on a DSP controller. TW AUDiO only recommends using presets developed by TW AUDiO. The TW AUDiO system racks are ideal for this purpose.



Ensure that the right preset was selected before connecting the loudspeaker with the amplifier.

Operating with an incorrect preset can damage parts of the loudspeaker.



Ensure that the amplifier is properly sized according to requirements. Undersizing or oversizing may damage the loudspeaker.

Please note the technical data in section 3.1 "Data sheet" on page 4.

## 5. Transport and storage



Because the B30 loudspeaker weighs over 20 kg [44,09 lbs], two people are needed to move and transport the unit.

To transport the unit with a single person, TW AUDiO recommends using the FDB30 front dolly. Alternatively, up to four B30 loudspeakers can also be transported in a QDB30 quad dolly.

When transporting and storing the unit, it is important to ensure that the surface and front grill of the loudspeaker are not damaged. Moisture can penetrate through exposed wood surfaces and cause the wood to swell. A bent or broken front grill will no longer adequately protect the sensitive speaker membranes.

In addition, appreciable dust deposits may considerably impair the functionality of a loudspeaker membrane. For this reason, the loudspeakers should be transported and stored in a safe, careful, dry and largely dust-free manner.

The following accessory parts for transport and storage are available from TW AUDiO:

- FDB30 (front dolly)
- QDB30 (quad dolly)
- CoverB30 (protective cover)

The original packaging is unsuitable as permanent storage and transport packaging.

## 6. CE Conformity Declaration

Copy and translation of the original CE Conformity Declaration:



We hereby declare that the below-referenced components by virtue of their design and construction, and in the configuration placed on the market by us, satisfy the safety and health requirements of the applicable EC directives. This declaration becomes invalid in case of modifications that have not been approved by us.

**This declaration applies to the following components:**

- B30

as well as all model variants based on these, provided that they correspond to the original factory models and have not been technically modified in any way.

**Applicable directives:**

- 2001/95/EC
- 2011/65/EU

**Applicable national standards and technical specifications:**

- DIN 18800
- DIN 4113
- DIN EN ISO 14121-1
- BGV C1/BGI 810-3
- EN 50581:2012

Ludwigsburg, Germany, 01 April 2014

A handwritten signature in black ink, appearing to read 'T. Wüstner', written over a horizontal line.

Tobias Wüstner

## 7. Disposal

It is prohibited to dispose of used electrical equipment with household refuse



All products of TW AUDiO GmbH are so-called B2B products. This means that they are sold by a commercial business to a commercial business. TW AUDiO products that bear the trash can symbol shown here are only permitted to be disposed of by TW AUDiO.

The loudspeaker owner is legally responsible for the disposal of used devices that do not bear this symbol. This pertains to all products delivered prior to 29 March 2010. Nevertheless, TW AUDiO will also be happy to assist you in this case.

If you have any question regarding the disposal of used devices, please contact us under the following telephone number:

+49 (0) 71 41 - 48 89 89 0

Thus, TW AUDiO is in strict compliance with the Waste Electrical and Electronic Equipment Directive (2012/19/EU) for the protection of our environment.

TW AUDiO is registered under the following WEEE reg. no. with the German National Register EAR as a B2B manufacturer and distributor of electrical devices:

**DE54488702**

In countries outside of the European Union, follow the local regulations.

TW AUDiO GmbH  
Osterholzallee 140-2  
71636 Ludwigsburg  
Germany

P: + 49 (0) 71 41-48 89 89 0  
F: + 49 (0) 71 41-48 89 89 99  
E: [info@twaudio.de](mailto:info@twaudio.de)  
W: [www.twaudio.de](http://www.twaudio.de)